



## Quick Start Instructions for LollyWaffle PRO-EXP



- **Unpack Machine and remove any papers or packing material**
- **Plug in machine, attach handle, open the plates and flip the switch on the side.**
- **Machine is now preheating. Please allow 20-30 minutes to come up to temperature. Please note: once the machine is preheated and in use, it will keep it at the set temp. Please ensure that this machine is on its own plug and not plugged in with anything else that draws heat or cooling. The machine will beep and display will begin to flash when preheating is complete.**
- **Mix your waffle batter and pour into the wells.**
- **Insert your sticks/skewers**
- **Close machine and rotate. This will engage the timer.**
- **Once the set time has elapsed, the machine will beep and you may rotate it back**
- **Carefully open your machine and remove your finished product.**